USER MANUAL

OCS (LP7655 Series)

Crane Scale

List

Security Guide _____ *1*

1、*Instruction* _____ *1*

1.1 Function feature _____ 1

1.2 Specification _____ 2

1.3 Battery instruction _____ 2

2、*specification* _____ *2*

2.1 Model & specification _____ 2

2.2 Installation _____ 3

3、*Basic operation* _____ *4*

3.1 Key function _____ 4

3.2 Power on _____ 4

3.3 Power off _____ 5

3.4 Zero/tare _____ 5

3.5 Hold function _____ 6

3.6 Units convert _____ 6

4、*Parameter setting* _____ *8*

5、*Packing list* _____ *9*

Security Guide

In order to ensure the accuracy of crane scale, please pay attention to the daily use and maintenance:

●Don't overload, or it will damage the load cell, even worse causing casualties.

●Don't hang the heavy weight on the crane scale, or it will reduce the accuracy, and short the usage life of load cell.

●Please check the hook and ring before using.

●Please check the power frequently; When the crane scale is Low-voltage, please change the battery.

●Please take out the battery if no long-term using.

●Don't use the crane scale in thunderstorm environment.

●Don't repair by yourself, please contact with your local dealer.

1、Instruction

1.1 Function feature

●Light, handy and portable

●Low power design，longer battery usage time

●Perfect function：

Low-battery detection and warning，shutdown automatically while under voltage

Hold function, lock the weight

Idle mode and Automatic power off function

Zero/tare function

1.2 Specification

Accuracy class	
Tare range	2%~100% max. Capacity
Initial zero range	±10% max. Capacity
Manually zero range	±2% max. Capacity
Operation temperature& humidity	-10℃~+40℃； ≤85%RH

1.3 Battery instruction

The crane scale use 4 pcs of LR6 AA battery and work about 50 hours. If close the backlight mode, the battery can last 80 hours. When Low-battery detection and warns（light up the low battery icon）, please change the battery. If not timely change, the crane scale will shutdown automatically.

2、specification

2.1 Model & specification

Product No.	Model	Max Capacity (kg)	Division (kg)	Outline size W*L*H (mm*mm*mm)	Net weight (kg)
LP7655-015	OCS-S1-015	150	0.05	188*77*305	1.4
LP7655-030	OCS-S1-030	300	0.1	188*77*305	1.4
LP7655-050	OCS-S1-050	500	0.2	188*77*330	1.4
LP7655-1	OCS-S1-1	1000	0.5	188*77*330	1.6

2.2 Installation

Put in 4 pcs of LR6 AA battery， and hang on the hook before using.




3、Basic operation

3.1 Key function


Key /function	Weighing mode	Parameter setting
	Power on/off	Exit
HOLD / UNIT	Hold/units convert	Confirm
TARE / ZERO	Zero/tare	Page down

3.2 Power on

Press  1 second，power On Self Test.

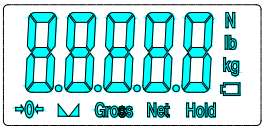

If exceed the zero range, it displays [ERR6]，or goes to weighing zero.

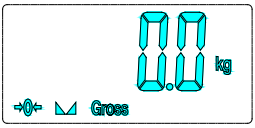

3.3 Power off

Press  1 second， the crane scale will power off.


If the battery under voltage , the crane scale power off automatically.

If there is no operation in 10 minutes, the crane scale power off automatically.

3.4 Zero/tare

While the weight is stable and exceed the zero range，press TARE/ZERO to enter into net weight mode，then the current weight tare as tare weight，display the net weight zero； While the weight is stable and in the zero range， press TARE/ZERO ,back to gross weight mode, display gross weight zero.

Tare：




Zero：



3.5 Hold function

While setting Hold=1， press HOLD/UNIT ,realize peak hold function.

While setting Hold=2， press HOLD/UNIT , hold the current weight 15 seconds；Press HOLD/UNIT ， release hold function.

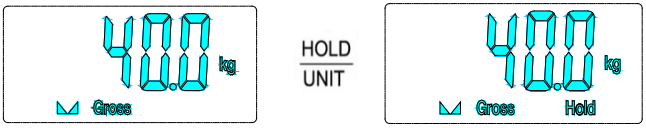

While setting Hold=3，the weight is stable and hold the current weight 15 seconds；Press HOLD/UNIT ， release hold function.


Hold time can be setting in Ht parameter.

3.6 Units convert

Press HOLD/UNIT 1 second，the units convert between kg/lb/N.

See No. 4 parameter setting (Units convert: UnS).



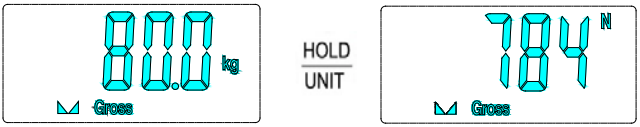

Remark：the convert unit still saved after power off.

4、Parameter setting

Press HOLD/UNIT and TARE/ZERO ,enter into parameter setting

Function	**Display**	**Parameter instruction**
Automatic power off	oFF 10	=0 close this function =10 power off in 10 minutes =30 power off in 30 minutes =60 power off in 60 minutes
Back light Mode	BL 1	=0 close back light Mode =1 auto back light =2 normally on back light
Units convert	UnS 1	=0 close Units convert =1 kg/N convert =2 kg/lb convert =3 kg/lb/N convert
Hold function	Hold 2	=0 close hold function =1 peak hold =2 data Hold =3 auto Hold
Hold time	Ht 1	=0 no time limit =1 15*1 second =2 15*2 second =3 15*3 second =4 15*4 second

5、Packing list

S/N	Product name	Qty.	Remark
1	LP7655 Crane scale	1	
2	AA Battery	4	
3	User manual	1	
4	remote control	1	
5	certification	1	
6	Carton	1	
option	adaptor	1	

Version: 7655PCN011150720